



Key No.	Part Description	Qty.	E50TLT	E50VLT	E75VLT
1	Power Cord Assembly	1	PW117-281-TSU	PW117-281-TSU	PW117-281-TSU
2	Impeller†	1	PS5-33P	PS5-33P	PS5-34P
3	Vertical Float Switch Assembly	1	—	PKG208	PKG208
4	Tethered Float Switch Assembly	1	FP18-15BD	—	—

**NOTE:** If motor fails, replace entire pump.

† See Page 8 for impeller replacement instructions.